

Alcatel-Lucent OmniTouch™ 8082 My IC Phone

OmniPCX Enterprise



User manual

Introduction

Thank you for choosing an Alcatel-Lucent phone..
This model offers enhanced ergonomical features for more effective communication..
Its innovative and high-quality design will improve your corporate communications and allow access to a variety of services..

How to use this guide

• Actions



Lift the receiver.

Hang up.



Press the touch screen once .

Move your finger while keeping it in contact with the screen .



Press the touch screen twice .

• Keypad



Numeric keypad..



Alphabetic keypad.



Press the forward key.



Back to homepage.



Open the alpha-numeric keyboard.

• Audio keys



Hands free.



Phone key to increase ring, handset or speaker volume.



Phone key to decrease ring, handset or speaker volume.

These symbols can be supplemented by small icons or text..

Contents

 
	Getting to know your telephone	p. 8
1.	Getting to know your telephone	p. 10
	1.1 Phone description	p. 10
	1.2 Screen description	p. 11
	1.3 Personal area	p. 11
	1.4 Notifications area	p. 12
	1.5 Date, time and connectivity area	p. 12
	1.6 Connectivity icons	p. 12
	1.7 IP Touch Bluetooth® Wireless handset	p. 13
2.	Using your telephone	p. 15
	2.1 Make a call	p. 15
	2.2 Make a call using the personal phone book	p. 15
	2.3 Using call by name	p. 16
	2.4 Call from call log	p. 16
	2.5 Redialling the last number dialled (redial)	p. 16
	2.6 Make calls via your programmed call keys	p. 17
	2.7 Answer the call	p. 17
	2.8 Ignore call	p. 17
	2.9 Reject a call	p. 17
	2.10 Forward an incoming call to voice mail	p. 18
	2.11 Using the telephone in Hands free mode	p. 18
	2.12 Mask my identity	p. 18
	2.13 Contact call log	p. 19
	2.14 Customize the call log	p. 19
	2.15 Delete one call log event	p. 20
	2.16 Delete all events from the call log	p. 20
3.	During a conversation	p. 21
	3.1 Placing an outside call on hold (parking)	p. 21
	3.2 Calling a second person during a conversation	p. 21
	3.3 Switching between calls (Broker call)	p. 21
	3.4 Transferring a call	p. 22
	3.5 Three-party conference	p. 23
	3.6 Mute, so that your correspondent cannot hear you	p. 23
	3.7 Voice frequency	p. 23
4.	Contacts management	p. 24
	4.1 Define a contact	p. 24
	4.2 Add a contact while on a call	p. 24
	4.3 Make a call using the personal phone book	p. 24
	4.4 Modify a contact	p. 25
	4.5 Delete a contact	p. 25
5.	Keep in touch	p. 26
	5.1 Details on your phone (number, name, etc.)	p. 26
	5.2 Immediate forward to a number	p. 26
	5.3 Immediate forward to voice mailbox	p. 27
	5.4 Consulting your voice mailbox	p. 27
	5.5 Define a forward	p. 27
	5.6 Activate a predefined forward	p. 29
	5.7 Cancel the forwarding	p. 29
	5.8 Modify the forwarding	p. 30
	5.9 Delete a forward	p. 30
	5.10 Do not disturb	p. 31
6.	Email	p. 32
	6.1 Send an email	p. 32
	6.2 Manage your emails	p. 32
	6.3 Change the keyboard type	p. 33
	6.4 Delete a character	p. 33
	6.5 Write in uppercase	p. 33
	6.6 Write a number	p. 34

Contents




 
7.

Programming your telephone	p. 35
7.1 Immediate forward to voice mailbox	p. 35
7.2 Your visual voice mail	p. 35
7.3 Programming direct call keys	p. 35
7.4 Make calls via your programmed call keys	p. 36
7.5 Program a forward on a programmable virtual key	p. 36
7.6 Activate the forward from a programmed key	p. 37
7.7 Change your direct call keys	p. 37
7.8 Delete a direct call key	p. 38
7.9 Lock / unlock your telephone	p. 38
7.10 Set time and date	p. 39
7.11 Adjusting the audio functions	p. 39
7.12 activate/deactivate silent mode	p. 39
7.13 Ring tones	p. 40
7.14 Progressive ringing	p. 40
7.15 Adjust ringer volume while a call arrives	p. 40
7.16 Adjust the loudspeaker and the handset volume	p. 41
7.17 Activate/deactivate the key tone	p. 41
7.18 Activate/deactivate key vibration	p. 41
7.19 Install a Bluetooth® device (pairing)	p. 42
7.20 Hearing aid kit	p. 42
7.21 Activate the magnifying glass feature	p. 43
7.22 Magnifying glass	p. 43
7.23 Programming an appointment reminder	p. 43
7.24 Modify an appointment reminder	p. 44
7.25 Delete an appointment reminder	p. 44
7.26 Program a wake-up time	p. 45
7.27 File Manager	p. 45
7.28 Delete a file	p. 46
7.29 Rename a file	p. 46
7.30 Listen to an audio file	p. 47
7.31 Play all audio files	p. 47
7.32 Add music from a remote server	p. 48
7.33 Add an audio file to the list of ring tones	p. 48
7.34 Add an audio file to the list of wake-up ring tones	p. 48
7.35 Set the audio file as ringing	p. 49
7.36 Phone wallpaper	p. 49
7.37 Customize the user picture	p. 49
7.38 Configure your homepage	p. 50
7.39 Modify the homepage phone	p. 50
7.40 Change the theme of your phone	p. 51
Guarantee and clauses	p. 52

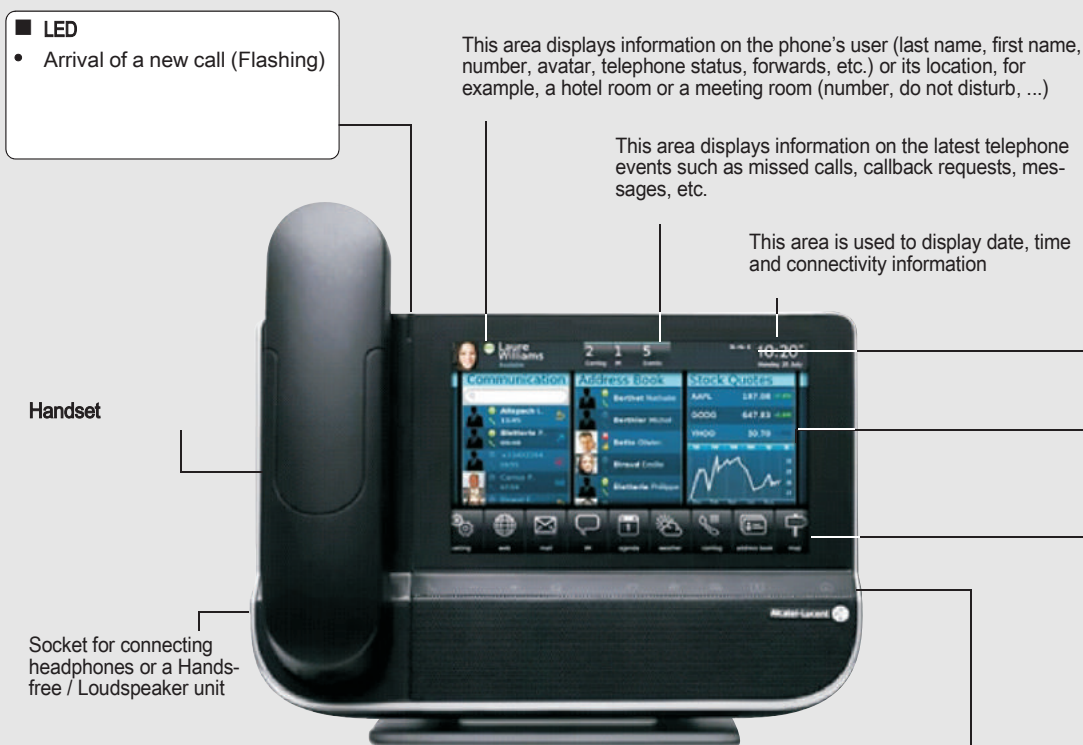Getting to know your telephone






■ **Audio keys**

-  **Hang-up key:** to terminate a call.
-  **Hang up key:** to answer a call.
-  **Hands-free/Loudspeaker Key:** to make or answer a call without lifting the receiver.
- Intercom/Mute key:**
 - During a conversation: press this key so that your correspondent can no longer hear you.
 - Terminal idle: press this key to answer calls automatically without picking up the receiver.
-  **To adjust the loudspeaker or handset volume up or down**

■ **Alpha-numerical keypad**

The alpha-numerical is automatically displayed when you select a text zone or when you select the alpha-numeric keyboard key.



-  Open the alpha-numeric keyboard
-  Open the numeric keyboard
- CAPS** Write in uppercase
- NUM** Write a number




■ **Connectivity icons**

-  **Headset connected**
-  **Silent mode activated**
-  **Bluetooth® device connected**
-  **Appointment programmed**
-  **Telephone locked**

■ **Navigation**

Scroll down or up your finger to get the page or menus vertically scrolling, or scroll right or left to get the page horizontally scrolling..



-  **OK key:** used to validate your choices and options while programming or configuring.
-  **Back to previous screen**
-  **Back to homepage**

■ **Call display, Calls log**



- All incoming, outgoing, missed or unanswered calls are displayed in the call log
- Information regarding your contact is displayed on the screen






■ **Application**

The applications bar allows you to access to all the applications on the phone.



-  **Scroll applications to get the desired application**
-  **Scroll applications to get the desired application**

■ **Features key**

-  **Forward**
The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy
-  **Alarms**
-  **Telephonic events** (missed calls, callback requests, message,...): the key is lighted

1 Getting to know your telephone

1.1 Phone description



- 1 A sensitive LED wide screen
- 2 Quick access to the main phones features
- 3 A Bluetooth® handset for optimized communication
- 4 A wide speaker for optimized sound
- 5 An adjustable and stable foot
- 6 Good connectivity to allow phone extensions

- A 10/100/1,000 Ethernet connection to connect to enterprise networks or a PC
- Bluetooth®
- 2 USB connectors
- 1 mini-USB connector for a keyboard
- 1 RJ9 connector for a corded handset
- One 3.5 mm headset connector

1.2 Screen description



1

Personal area

This area displays information on the phone's user (last name, first name, number, avatar, telephone status, forwards, etc.) or its location, for example, a hotel room or a meeting room (number, do not disturb, ...)

2

Notifications area

This area displays information on the latest telephone events such as missed calls, callback requests, messages, etc.

3

Date, time and connectivity area

This area is used to display date, time and connectivity information

4

Active area

This area is reserved for running applications and for previews of applications selected by the user

5

Applications area

This area allows access to all set applications and to different features of the running application

1.3 Personal area

This area displays information on the phone's user (last name, first name, number, avatar, telephone status, forwards, etc.) or its location, for example, a hotel room or a meeting room (number, do not disturb, ...).

There are 2 parts:

**Forwards
and status**

Information on the availability of the user and the status of the forwards

UserInfo

Information about the user or phone location (hotel room or meeting room for instance)



Press this area to access the user parameters (forwards, services, ...)

1.4 Notifications area

This area displays information on the latest telephone events such as missed calls, callback requests, messages, etc. Events are sorted in chronological order.



You will also find the specific call keys programmed by the administrator (emergency calls for instance).

1.5 Date, time and connectivity area

This area is used to display date, time and connectivity information.



Press this area to access date and time settings

1.6 Connectivity icons



1,000 Mbits Ethernet connection



100 Mbits Ethernet connection



10 Mbits Ethernet connection ;



No Ethernet connections



VoIP Connection established



No VoIP connection



ICS server connection established










No ICS server connection




Security mode



Storage device connected to USB port


	Bluetooth® device pairing in progress
	Bluetooth® device connected
	Bluetooth® device not connected
	Headset plugged in
	Wake-up feature activated
	Silent ring activated
	Intercom mode

 1.7 IP Touch Bluetooth® Wireless handset

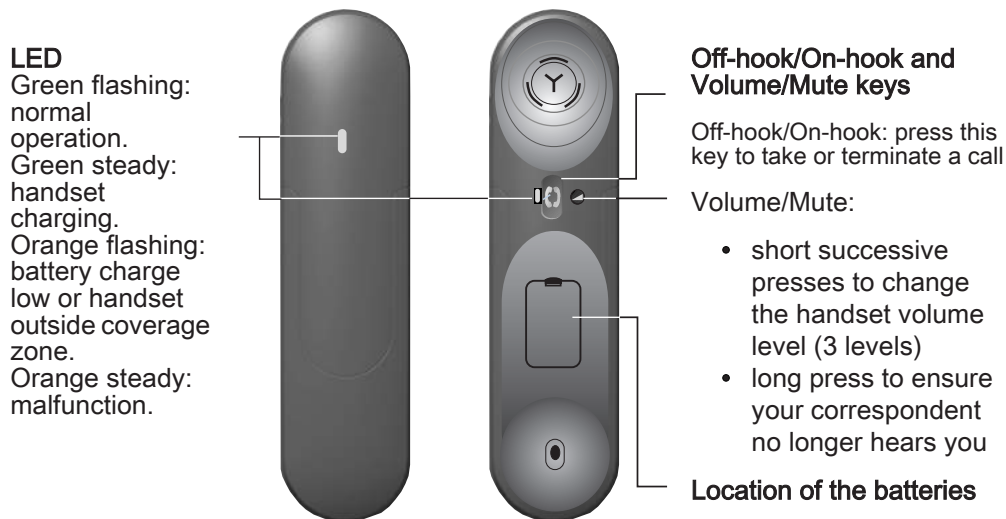

If the Bluetooth® handset is on its base, you do not need to press the Off-hook/On-hook key to take or terminate the call. Just off-hook/on-hook the Bluetooth® handset.

 
- Installing or replacing the Bluetooth® handset battery

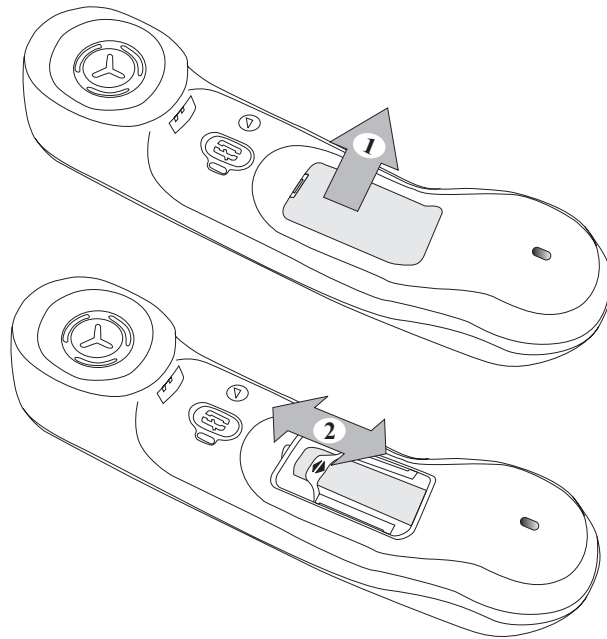

- Installing or replacing the Bluetooth® handset battery

①	•Lift up the battery cover
②	•Slide out the battery holding part



The battery recharges when the Bluetooth®  handset is on its base.

2 Using your telephone

2.1 Make a call



Take the handset off the hook

OR



Press the phone's keyboard key

OR



Hands-free key

OR



Communication



Call



Dial the number for your call



Call

•End the call



Hang up the handset

OR



End call

2.2 Make a call using the personal phone book



Select the application
Address book



Select the contact to call

Information regarding your contact is displayed on the screen



Press the phone number to call your contact



If there are several numbers for the same contact, select the desired number.

2.3 Using call by name



Dial by name



Enter the first letters of the name, name-first name or the initials of your correspondent

The names of contacts matching your search criteria are automatically displayed on the screen



Call the chosen correspondent



Modifying a card in the personal directory

2.4 Call from call log

All incoming, outgoing, missed or unanswered calls are displayed in the call log.

You can call back from your phone call log.



Select the contact to call



Start the call :
Call



If there are several numbers for the same contact, select the desired number.

2.5 Redialling the last number dialled (redial)



Select the application
Communication



From the call log, select one of the last numbers dialed



Call back one of the last numbers dialled



You can also access the feature by selecting the application preview
Communication

2.6 Make calls via your programmed call keys

If you have programmed a key with your contact's number, you can call them just by pressing the programmed key.



Select the application
Programmable Keys

The favorite screen is displayed with the preprogrammed keys



Press the direct call key (in the programmable keys application preview)

The call is automatically started



You can also access the feature by selecting the application preview Favorites

2.7 Answer the call



Answer call

OR



Take the handset off the hook

OR



Hands-free key

• End the call



Hang up the handset

OR



End call

2.8 Ignore call

A call is received:



Ignore call

Your phone no longer rings but your caller still hears the ringing tone

2.9 Reject a call

A call is received:



Reject call

The caller hears a busy line tone

2.10 Forward an incoming call to voice mail

A call is received: your telephone rings.



The call is directly forwarded to your voice mail

2.11 Using the telephone in Hands free mode



You are connected

Hands-free key

Select the desired audio mode:



Handfree



Speaker



Handset

•To take the call back with the handset



Take the handset off the hook

•To go back to handsfree mode



Press the handsfree key again

2.12 Mask my identity

You can hide your identity before sending your call..



Select the application
Settings



Application



Telephony

Activate /
Deactivate:

Hide identity



Back to homepage

2.13 Contact call log

You can display your contact's call details (received calls, missed calls, callback requests, etc.).



Select the recipient from the call log



Contact log

List your contact's calls (outgoing, incoming, missed, etc.)

2.14 Customize the call log

You can filter the calls displayed in the call log according to their type: missed calls, callback requests, received calls, etc.



Select the application
Communication



Filter



Select the call types that you want to display:

- All incoming calls
- All outgoing calls
- Answered incoming calls
- Unanswered incoming calls
- Answered outgoing calls
- Unanswered outgoing calls
- Callback requests
- Voice messages
- All events (all calls, messages, emails)
- instant messages
- emails



Back

Call log customization is active



The filter remains active once you have left the application.



You can also access the feature by selecting the application preview Communication

• Display all calls



Filter

 



All calls




Back


2.15 Delete one call log event

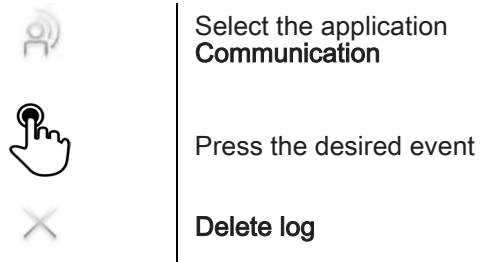

 You can also access the feature by selecting the application preview Communication

 2.16 Delete all events from the call log

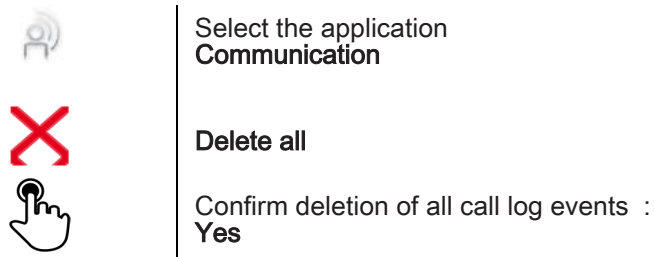

 You can also access the feature by selecting the application preview Communication

3 During a conversation

3.1 Placing an outside call on hold (parking)



You are connected

Hold call

your call is placed on hold

Your caller hears on-hold music until you answer the call

•Recover the correspondent on hold



Retrieve call

You are back on the call with your caller

3.2 Calling a second person during a conversation



You are connected.

New call

Calling a second person during a conversation



Call

the first call is on hold

3.3 Switching between calls (Broker call)



You are in communication with a first correspondent
A second correspondent is on hold

Select the caller on hold



Retrieve call

First call is automatically placed on hold

3.4 Transferring a call

During a conversation, to transfer the call to another number:

- You are in communication with a first correspondent



Transfer



Call the recipient of the transfer :

Select the recipient from the call log

OR



Dial the number of another contact

OR



Address book



- Select the contact to call
- Press the phone number to call your contact



Call



Transfer

The two correspondents are connected

- You are in communication with a first correspondent. A second correspondent is on hold.

You want to connect the first caller with the second.



Transfer



Select the caller on hold from the call log

The two correspondents are connected

3.5 Three-party conference



You are in communication with a first correspondent. A second correspondent is on hold.

Conference

Select the caller on hold that you wish to bring into the conference

You are in conference mode

During the conversation, you can:



Stop conference

hang up on all correspondents



End call

cancel conference and return to first correspondent

3.6 Mute, so that your correspondent cannot hear you

During the call, you do not wish your caller to hear you.



Press your phone's Mute/Intercom



Mute mode is activated (The key is blue)

Your caller can no longer hear you



Press the key again to go back to normal mode

3.7 Voice frequency

During a conversation you sometimes have to send DTMF signals, such as with a voice server, an automated attendant or a remotely consulted answering machine.

- If DTMF is activated by default on your system



Keyboard



Enter the requested codes

- If DTMF is not activated by default on your system



Send DTMF







Enter the requested codes



The function is automatically cancelled when you hang up.




4 Contacts management


4.1 Define a contact

	Select the application Address book
	Add
	Fill in the contact file. You must provide at least a last name.
	Save Contact




4.2 Add a contact while on a call


You are on a call and wish to add the caller to your contacts list.

	You are connected Add Contact
	Fill in the contact file
	Save Contact

 If you don't have enough time to fill in the contact file, you can do it later by modifying the contact.

4.3 Make a call using the personal phone book

	Select the application Address book
	Select the contact to call
	Information regarding your contact is displayed on the screen
	Press the phone number to call your contact

 If there are several numbers for the same contact, select the desired number.

4.4 Modify a contact



Select the application
Address book
Select the contact to modify



Edit



Fill in the contact file



Save Contact

4.5 Delete a contact



Select the application
Address book
Select the contact to delete



Delete

Delete Contact ?

Select

Yes

5 Keep in touch

5.1 Details on your phone (number, name, etc.)

Want to know more about information on the extension number, the location, etc..



Press your information area in the top left corner of the screen



UserInfo

You can display your personal information such as your telephone number, the name you are registered with, the location of the set, etc..

5.2 Immediate forward to a number

The number can be your home, portable or car phone, voice message or an internal extension (operator, etc.).



Press the forward key

OR



Press your information area in the top left corner of the screen



Routing



Immediate forward to...



No. of diversion telephone

Ok

To confirm



Forward is activated (The key is blue)




The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy.

The forward key is not lit when no forward is activated.



When you create a forward, it will be added to the list of available forwards so that you can reuse it.

5.3 Immediate forward to voice mailbox

-  Press the forward key
- **Voicemail**
- Forward is activated (The key lights up)



The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy .

The forward key is not lit when no forward is activated.



When you create a forward, it will be added to the list of available forwards so that you can reuse it.

5.4 Consulting your voice mailbox









On the homepage, press the voice mail key

Follow the instructions of the voice guide

5.5 Define a forward

Your phone allows you to define different types of forwards.

- **Immediate forward to a number**
All your calls are forwarded to another phone
- **Forward if busy**
Callers can be diverted to another telephone if you are already on the line
- **Forward if no answer**
When you are absent, all your calls are forwarded to the number of your choice (delayed forwarding on no answer)
- **Forward if busy or no answer**
When you are absent or already in communication, all your calls are forwarded to the number of your choice (delayed forwarding on no answer or busy)
- **Immediate forward to voice mailbox**

- Press the forward key
- OR**
-  Press your information area in the top left corner of the screen
-  **Routing**
-  **Add routing**
- Select the forward type to program
 - **Immediate forward to...**
 - **Forward if no reply**
 - **Forward if busy**
 - **Forward if busy or no reply**
 - **Voicemail**
-  **Next**
-  Select where to forward the calls: associate, operator, voice mail, mobile or directly dialed number
-  Where appropriate, dial the number of the destination set
- Ok**
- Save the forward
The forward is added to the list of predefined forwards
- Forward is activated (The key lights up)









The different numbers are defined in the phone parameters.



The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy.
The forward key is not lit when no forward is activated.

5.6 Activate a predefined forward

Your phone allows you to activate predefined forwards or forwards that you created previously.

 	Press the forward key OR Press your information area in the top left corner of the screen
   	The predefined forwards list is displayed on the screen Select the desired forward Where appropriate, dial the number of the destination set Back to homepage Forward is activated (The key lights up)



The different numbers are defined in the phone parameters .








The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy.

The forward key is not lit when no forward is activated.










5.7 Cancel the forwarding


Forward is active (forward key lit).


 	Press the forward key OR Press your information area in the top left corner of the screen
  	Routing None Back to homepage Back

5.8 Modify the forwarding

You can modify the forwards that you have programmed.





	Press the forward key
	OR
	Press your information area in the top left corner of the screen
	Routing
	Modify routing
	Select the forward to modify
	Select the forward type to program <ul style="list-style-type: none"> • Immediate forward to... • Forward if no reply • Forward if busy • Forward if busy or no reply • Voicemail
	Next
	Select where to forward the calls: associate, operator, voice mail, mobile or directly dialed number
	Where appropriate, dial the number of the destination set
Ok	Save the forward

 The different numbers are defined in the phone parameters .

 The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy .
The forward key is not lit when no forward is activated .

5.9 Delete a forward

You can delete forwards that you have programmed .

	Press the forward key
	OR
	Press your information area in the top left corner of the screen
	Delete routing
	Select the forward to delete
	Yes

5.10 Do not disturb

You do not wish to be disturbed.



Press the forward key

OR



Press your information area in the top left corner of the screen



UserInfo



DND



Enter the password (0000 by default)



The green light must be on. The activated feature is indicated in your personal information area in the top left corner of the screen.

To deactivate the feature



To deactivate the feature: **DND**

The green light goes off and the indicator disappears from your personal information area in the top left corner.



When you activate this feature, the caller who is trying to get in touch with you will hear a busy tone.









In Hotel mode, handsets belonging to the same set will be inaccessible

6 Email










6.1 Send an email

You can send emails from your phone set

	Select the application Mail Access emails
	New mail
To	Enter recipient's email address
Title	Write the message title
	Write the message
	Send mail Send message.
	OR Save mail Save the message to send it later.
	OR Cancel Cancel message writing.

6.2 Manage your emails

You can send emails from your phone set

	Select the application Mail Access emails
	Edit draft Display emails saved as drafts .
	Answer Answer the message sender .
	Answer all Answer the sender and all parties copied on the email .
	Forward Transfer an email to another recipient .
	Delete Delete a message .
	Filters Display the messages sorted by date, same sender, unread or all messages .
	P1-accept Accept invitation to an appointment sent by email.
	P1-refuse Refuse invitation to an appointment sent by email.

6.3 Change the keyboard type

While editing text, you can change the keyboard type to match the language you are writing: azerty, qwerty, pinyin, zhuyin,



Press the key symbolizing the keyboard for your language

Select the keypad type

Ok

Apply your choice

6.4 Delete a character

When editing a text you might have to correct it.



Place the cursor after the text to delete by touching the screen

Press the delete key of your keyboard

•When you edit a text, you can delete several characters at once



Place the cursor before the first character to delete and, keeping your finger in contact with the screen, move to the last character to delete



Press the delete key of your keyboard

6.5 Write in uppercase

By default, the written characters are in lowercase.

CAPS

Press this key once



The next character will be written in uppercase and then you will automatically switch to lowercase

CAPS

Press this key twice



Uppercase mode is used for all written characters

CAPS

To go back to lowercase mode, press the key again



This key's green light is on. Upper case mode is activated.

6.6 Write a number

NUM

Press this key once

Write a number, then the alphabetic mode is automatically activated

NUM

Press this key twice

Write numbers

NUM




To go back to alphabetic mode, press the key again



This key's green light is on. The numerical keyboard is locked.

7 Programming your telephone

7.1 Immediate forward to voice mailbox

-  Press the forward key
-  **Voicemail**
-  Forward is activated (The key lights up)



The forward key color depends on the kind of forward activated: blue for an immediate forward, purple for a forward if busy, green for a forward if no answer and yellow for a forward if no answer or busy . The forward key is not lit when no forward is activated.



When you create a forward, it will be added to the list of available forwards so that you can reuse it.

7.2 Your visual voice mail

The number of new vocal messages is displayed in the phone notification area.



Press the vocal messages number in the notification area in the top middle of the screen

The number of total messages, the number of unread messages and the date of the last message are displayed on the screen



Call VM



Follow the instructions of the voice guide

7.3 Programming direct call keys



Select the application
Programmable Keys



Add



Call



Next Step



Ok

Enter the destination number

To confirm

Select the key (virtual or physical)

**Next Step**

Ok

Give the programmable key a name

To confirm



You can also access the feature by selecting the application preview
Programmable Keys

7.4 Make calls via your programmed call keys

If you have programmed a key with your contact's number, you can call them just by pressing the programmed key.



Select the application
Programmable Keys

The favorite screen is displayed with the preprogrammed keys



Press the direct call key (in the programmable keys application preview)

The call is automatically started



You can also access the feature by selecting the application preview
Favorites

7.5 Program a forward on a programmable virtual key



Select the application
Programmable Keys

**Add****Forward****Next Step**

Select the forward type to program
follow informations displayed on the screen
Select the key (virtual or physical)

**Next Step**

Ok

Give the programmable key a name

To confirm



You can also access the feature by selecting the application preview
Favorites

7.6 Activate the forward from a programmed key



Select the application
Programmable Keys

The favorite screen is displayed with the preprogrammed keys



Press the forward programmed key

Forward is activated



You can also access the feature by selecting the application preview Favorites

7.7 Change your direct call keys



Select the application
Programmable Keys



Modify



Call



Next Step



Enter the destination number

Ok

To confirm
Select the key (virtual or physical)



Next Step







Give the programmable key a name


Ok

To confirm

7.8 Delete a direct call key

	Programmable Keys
	Enter delete mode Delete Press the key you want to delete Delete programmable key?
Ok	To confirm
	Exit delete mode Delete


 You can delete other programmable keys as long as you don't exit delete mode.

 You can also access the feature by selecting the application preview Favorites





7.9 Lock / unlock your telephone


Once the phone is locked, you can only call special numbers such as emergency, security or standard (3 max configured by the administrator) .

• Locking your terminal



	Password Telephone locked
---	-------------------------------------

Other method

	Press the forward key OR
	Press your information area in the top left corner of the screen
	UserInfo
	Password Telephone locked.

 When receiving a call, you are invited to answer the call, unlock the phone to answer the call or to ignore the call.

• Unlock your terminal

	Press any key to unlock the phone
	Enter your password to unlock the phone (The default password is 0000)

7.10 Set time and date



Press the time and date area displayed on your screen



Set time



Set date

Validate

Apply your choice



Back to homepage

7.11 Adjusting the audio functions



Select the application
Settings



Device



Audio



Ring melody



Choose ringer - 20 tunes

Ok

Apply your choice

7.12 activate/deactivate silent mode



Select the application
Settings



Device



Audio

 


Ring silent

Set to true or false to activate or deactivate the feature


7.13 Ring tones

You can choose to have 1, 2 or 3 beeps before the ring.

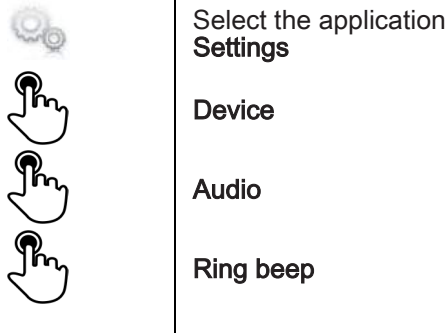


BeepSingle	One beep before ringing
BeepDouble	Two beeps before ringtone
BeepTriple	Three beeps before ringing
BeepNone	Ring without beep
Ok	Apply your choice


 
7.14 Progressive ringing

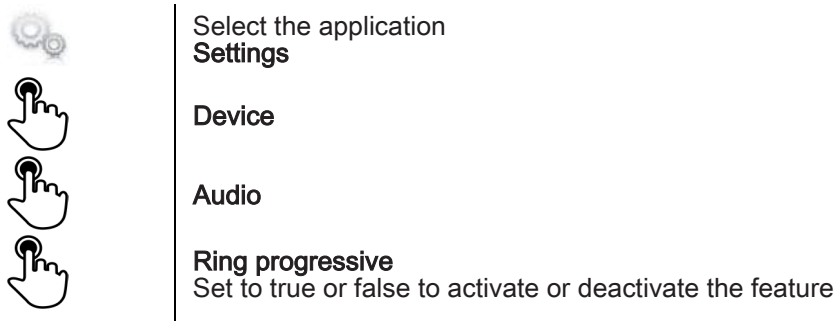

   7.15 Adjust ringer volume while a call arrives

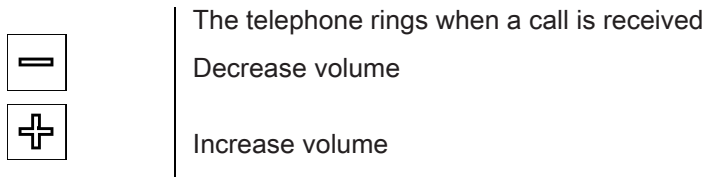




7.16 Adjust the loudspeaker and the handset volume

	During a call, to adjust the volume level of the loudspeaker or receiver:
	Decrease volume
	Increase volume

7.17 Activate/deactivate the key tone

When you press one of your phone keys, a tone confirms that the action has been taken into account by the system.







To activate or deactivate the key tone:

	Select the application Settings
	Device
	Phone configuration
Haptic feedbacks enabled	Set to true or false to activate or deactivate the feature

7.18 Activate/deactivate key vibration

When you press one of your phone keys, a vibration confirms that the action has been taken into account by the system.












To activate or deactivate key vibration:

	Select the application Settings
	Device
	Phone configuration
Haptic feedbacks enabled	Set to true or false to activate or deactivate the feature
• Adjust the vibration level	
	Settings
	Device
	Phone configuration
P1-Haptic Feeling	Select the desired vibration level: P1-NF-LOW P1-NF-MED P1-NF-HIGH




7.19 Install a Bluetooth® device (pairing)

You can use Bluetooth® devices such as handsets or headsets with your phone.






To use your Bluetooth® device, it must be paired to the set. To manage the pairing, the Bluetooth® device must be in detectable mode. Refer to your Bluetooth® device documentation to find out how to activate detectable mode.

	Your Bluetooth® device is ready to be paired
	Select the application Settings
	Device
	Bluetooth®
	Add device
	Scan
	The set scans for available Bluetooth® devices
	Select the Bluetooth® device to be paired
	Add the device to the device list
	Enter the device's PIN code
	Ok
	Bluetooth® device connected

7.20 Hearing aid kit




	Install the hearing aid kit using the instruction guide supplied
	Select the application Settings
	Device
Enable HAC	Audio
	Set to true to activate the feature The hearing aid kit is activated


7.21 Activate the magnifying glass feature


	Select the application Settings
	Device
	Phone configuration
	Enable magnify Set to true or false to activate or deactivate the feature
	Back to homepage

7.22 Magnifying glass






The magnifying glass feature allows you to zoom in on the active area of the screen.

	Magnify
	The magnifying glass keyfeature lights green when activated The active area of the screen is magnified. You can move this area and zoom any part of the screen you want
	Press the feature key again to go back to normal view: Magnify

 The application bar cannot be magnified.

 The magnifying glass feature must be activated in order to be used.

7.23 Programming an appointment reminder

	Select the application Agenda
	Add Fill in the various appointment fields: start and end time, day, description name of event and place for appointment
	Validate Event Activate the appointment The appointment reminder can be programmed from 0 minutes up to 2 weeks before the appointment
Alarm ON	
	Save Event
	Back to homepage



When the appointment reminder rings, this key lights blue

The appointment is indicated by an alert window.

When the wake-up bell rings you may repeat or turn off the bell:

- Stop
- Repeat



You can also access the feature by selecting the application preview Agenda

7.24 Modify an appointment reminder



Select the application
Agenda



Modify

Fill in the various appointment fields: start and end time, day, description name of event and place for appointment



Validate Event

Alarm ON

Activate the appointment

The appointment reminder can be programmed from 0 minutes up to 2 weeks before the appointment



Save Event



Back to homepage



You can also access the feature by selecting the application preview Agenda

7.25 Delete an appointment reminder



Select the application
Agenda



Delete Event

Yes
No

Confirm deletion














Back to homepage



You can also access the feature by selecting the application preview Agenda

7.26 Program a wake-up time



	Wake up
	Time
	Enter wake up hour
	Back
	Ringing alarm
	Select the melody of your choice
	Back
	Wake-up alarm status: Set to true or false to activate or deactivate the feature
	Adjusting the ringer volume
	Validate
	The green light is on when wake-up is activated
	The icon is displayed (connectivity information zone)








When the wake-up bell rings you may repeat or turn off the bell .


7.27 File Manager

This application allows you to manage audio files, images, webradios and other media.







	Select the application Files Manager
	Select the file type you want: <ul style="list-style-type: none"> • Audio • Video • Picture • Other • Webradio • Webtv
	All available files of the selected type (on set or storage media connected on USB port) are displayed. You can also manage your phone's multimedia files.


7.28 Delete a file

	Select the application Files Manager
	Select the file type you want: <ul style="list-style-type: none"> • Audio • Video • Picture • Other • Webradio • Webtv
	Enter delete mode Delete
	Select the file to delete
Yes No	Confirm deletion
	Exit delete mode

 You cannot delete a file stored on an external device.

7.29 Rename a file

	Select the application Files Manager
	Select the file type you want: <ul style="list-style-type: none"> • Audio • Video • Picture • Other • Webradio • Webtv
	Select the file to rename
	Rename
	Enter the new file name
Ok	Apply
	OR Cancel the operation Cancel

 You cannot rename a file stored on an external device.

7.30 Listen to an audio file



Select the application
Files Manager



Audio



Select the audio file

The audio file plays automatically



Stop listening:
Stop



Start listening again:
Play

7.31 Play all audio files



Select the application
Files Manager



Audio



Play all

The audio file plays automatically



Stop listening:
Stop all



Start listening again:
Play








Switch to next track:
Next







Listen to tracks in random order:
Shuffle





7.32 Add music from a remote server

	Select the application Files Manager
	Audio
	Add link
	Write the audio file name and URL
Ok	Apply
	OR Cancel the operation Cancel


7.33 Add an audio file to the list of ring tones

	Select the application Files Manager
	Audio
	Select the audio file
	Add to Ringing Pool

7.34 Add an audio file to the list of wake-up ring tones

	Select the application Files Manager
	Audio
	Select the audio file
	Add to Wakeup Pool

 
7.35 Set the audio file as ringing

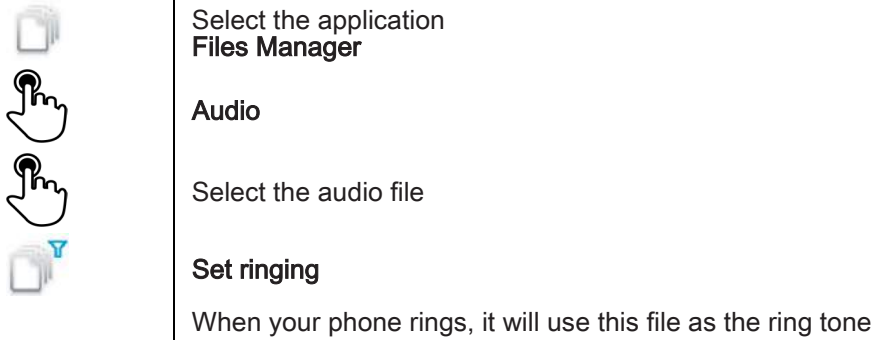


7.36 Phone wallpaper

You can change the wallpaper on your phone. The image must be stored in the set or on a USB storage device.

 If the image is on the USB storage device, you must connect it to the phone:

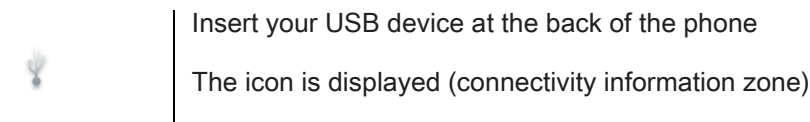

Change the wallpaper:

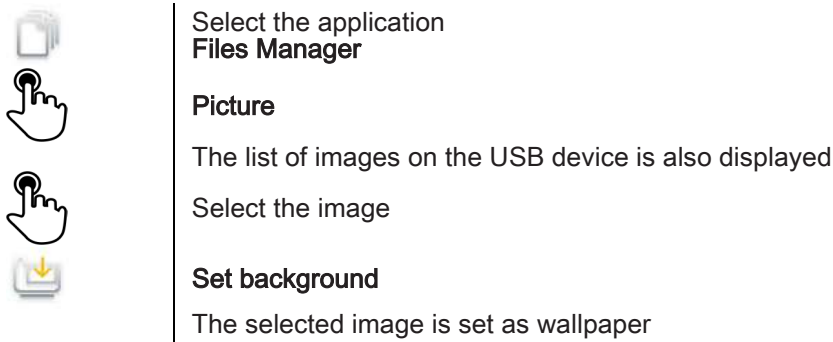 


7.37 Customize the user picture





You can change the picture displayed in your personal information area in the top left corner of the screen. The image must be stored in the set or on a USB storage device.

 The image must be stored in the set or on a USB storage device.

If the image is on the USB storage device, you must connect it to the phone:



Change the avatar:






	Select the application Files Manager
	Picture
	The list of images on the USB device is also displayed
	Select the image
	P1-ND
	The picture is updated

7.38 Configure your homepage

You can configure your homepage according to your needs and calling habits.

You can display many applications on the homepage such as your agenda, telephone events, contacts, programmable keys, etc.

• Add or delete an application on the homepage





	Select the application Settings
	Device
	Select the application that you want to add to the homepage or delete from the homepage
	Set Enable preview to True to add the application to the homepage or to False to delete it from the homepage
	Back to homepage

7.39 Modify the homepage phone

The feature keys are displayed on the bottom of your default homepage screen..

The main screen is used to display current applications (telephone events, agenda, etc.).

When modifying the default homepage, the features keys are displayed on the main screen of your phone.

	Select the application Settings
	Device
	homepage
Homepage Preview	Set to false to deactivate the feature
	Back to homepage

7.40 Change the theme of your phone



Select the application
Settings



Device



Phone configuration



Select the current theme in the configuration page

The available theme list is displayed on the screen



Select the desired new theme from the list

Ok

Confirm the selection

Guarantee and clauses

Safety Instructions

- Changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment..
- To limit the risk of interference, people with pacemakers must keep the wireless telephone away from their equipment (minimum distance of 15 cm)..
- It is recommend to follow the standard acceptance procedures before using this equipment in human safety critical areas (hospitals...)..
- The headset includes magnetic elements that may attract sharp metallic objects..
- There is a danger of explosion if the battery is replaced incorrectly - use only the battery with the reference 3GV28041AB (1.2V 1500 mAh)
3GV28041AB (1.2V 1500 mAh) (Bluetooth® Handset only).
- Battery charge (Bluetooth® Handset only) : Charge the battery for about 16 hours before initial use .

Regulatory Statements

EU/EFTA

This equipment is in compliance with the essential requirements of R&TTE Directive 1999/5/EC..

The Declaration of Conformity may be obtained from your installer.

USA and Canada

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada.. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules and ICES-003 of Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by consulting the dealer..

Guarantee and clauses

Exposure to Radio Frequency Signals.

This device has been designed and manufactured not to exceed the SAR (Specific Absorption Rate) radio frequency power transmission limits established by the different countries concerned. The SAR value for the Bluetooth® handset is 0.09 W/kg (the globally accepted maximum limit being 1.6 W/kg).

User Instructions

Only use the handset in temperatures between -5° C to +45° C (23° F to 113° F).

This apparatus is Hearing Aid Compatible (HAC).

Acoustic shock protection

The acoustic level of the signal generated by the handset earpiece is less than 130 dBspl for a transient signal (123 dBspl for Australia) and less than 118 dBspl (rms) for a continuous signal (120 dBA for Australia).

Directive 2003/10/EC specifying the risks inherent in noise at work

The ring contributes towards overall daily noise; at its maximum setting, the level is 105 dBA at 60 cm from terminal. To reduce the level, the following is recommended:

- reduce the setting (9 levels of 5 dB)
- program a progressive ring.

This device can be used for indoor operation in all the countries; you must consult your installer for an outdoor usage.

Privacy

Privacy of communications may not be ensured when using the Bluetooth® handset or any additional Bluetooth® device

Disposal



The equipment must be returned to a collection point for electronic equipment waste disposal.



Defective batteries must be returned to a collection point for chemical waste disposal..